

ΔTIZ


BookDrive N

Performance double-page scanner 351dpi at A3 size



Spread double-page scan

BookDrive N is for when you want to scan spread double-page image of a book, magazine, or a map.

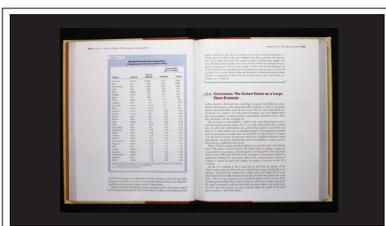

Scan with 50.6M pix sensor!!

Scanning with a high resolution image sensor is instantaneous regardless of page size. Optical core is removable and upgradeable meaning



Advanced lighting system

The proprietary cold LED lighting on both the front and rear of machine ensures your images have even brightness across the surface with no glare even on glossy materials.



Vertical-moving glass for thick materials

Instead of having a rotating point, the glass of BookDrive N can be freely moved vertically to provide a nice flattening effect on both thin materials such as a sheet of paper as well as thick, old books equally well.



As large as A2

BookDrive N max page size support is 17.51 x 25.39 inches (44.5 x 64.5 cm) so it can easily scan materials as large as A2. Quite handy when you want to scan things like large maps.



Adjustable cradle

The adjustable cradle has mechanism inside to support and protect the bindings of your books as well as provide the flattening effect for both sides of the page.



Ergonomic design from Atiz

Designed to be an ergonomic equipment, BookDrive N is comfortable for use over a long period.



Dimension

Height: 50.4 inches (128 cm)
 Width: 39.7 inches (100 cm)
 Depth: 47.2 inches (120 cm)
 Weight: 99 lbs (45 kg)